



REMOVE SPEAKER GRILLE FROM SPEAKER IF POSSIBLE, SO THAT THE SPEAKER USES THE FABRIC AS IT'S GRILLE IN THE END

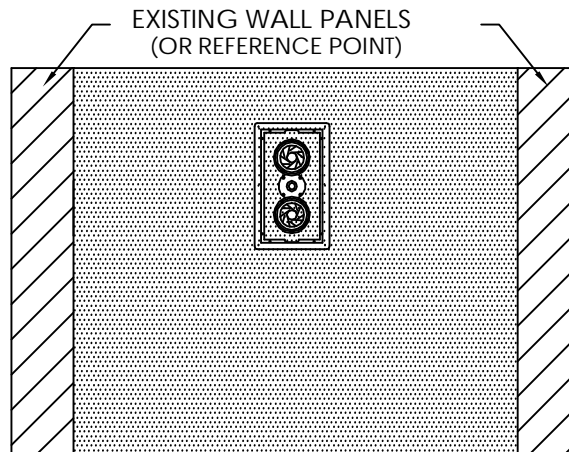


LOCATE WHERE PANEL NEEDS TO GO ON THE WALL AND DRY FIT OVER SPEAKER USING THE PROVIDED IMPALING CLIPS


* ALWAYS MAKE SURE TO LEAVE A MINIMUM OF 2" * FROM EDGE OF PANEL TO LOCATION OF CUT OUT

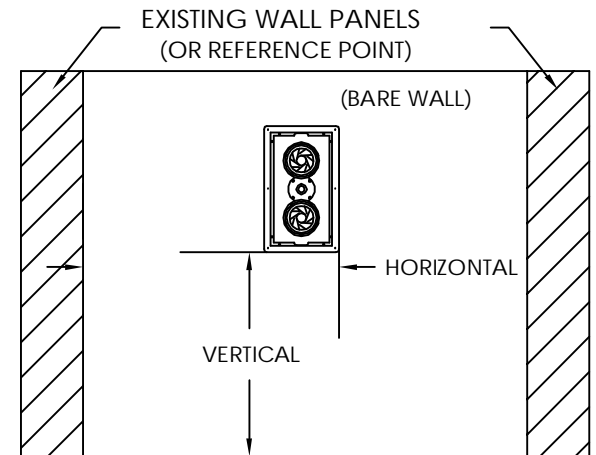

MEASURE SPEAKER ON THE WALL AND TRANSFER THESE DIMENSIONS TO THE BACK OF THE WALL PANEL.

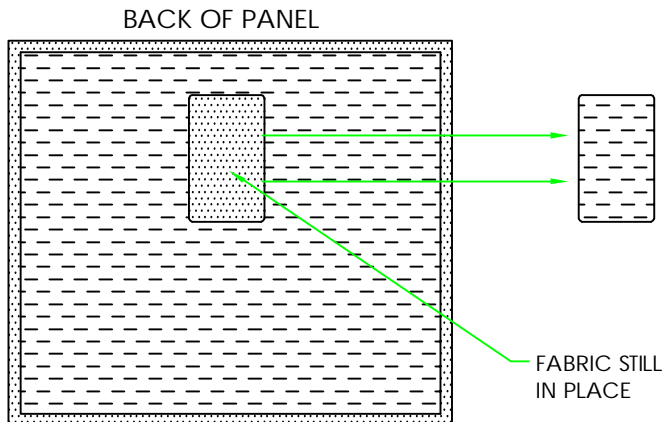

REMOVE FIBERGLASS OUTLINE ON EXTENSION WITH UTILITY KNIFE BEING CAREFUL NOT TO CUT FABRIC.

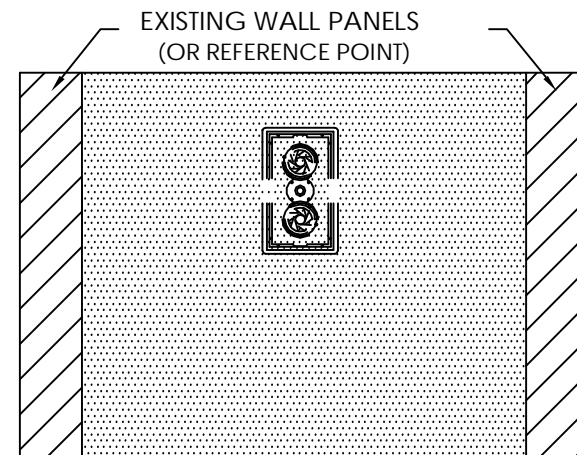

ATTACH PANEL TO THE WALL. PANEL SHOULD COVER UP THE SPEAKER W/ THE EXCEPTION OF THE AREA OF FIBERGLASS THAT WAS REMOVED MAKING THE FABRIC THE NEW SPEAKER GRILLE.